


How to Remove Your EcoSmart Cellular Shades


Here are some instructions for removing various types of EcoSmart Shades.

Note: If your shade will not stay in the retracted position, you can close the shade manually and secure with a rubber band at each end.


Current Standard & Top Down/Bottom Up Models

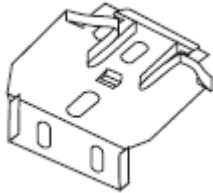


With your shade closed, press the headrail from the front and turn the bottom of the rail towards you.

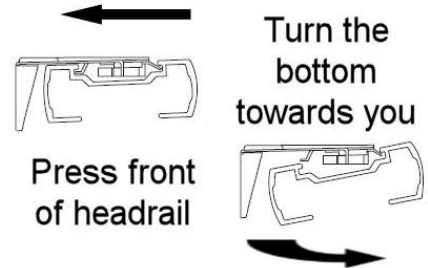


Omni-Rise Continuous Cord Loop, Cordless & Motorized Models

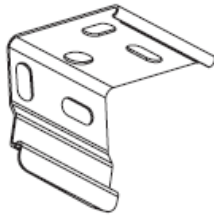

Insert a screwdriver between the headrail and bottom back of the bracket (tab which extends out slightly from each bracket). Gently pry the screwdriver to release the bracket from the headrail. Take care not to damage the painted finish of the headrail. As you release the brackets, support the headrail to keep it from falling.

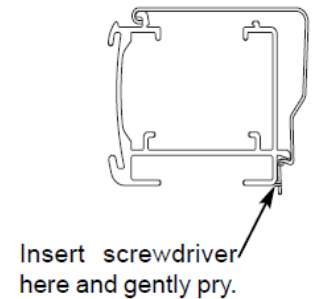

Smoothy Continuous Cord Loop & Current Cordless Models

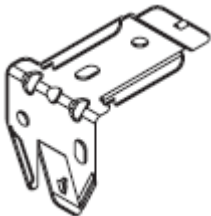

Insert a screwdriver between the headrail and the bottom back of the bracket (tab which extends out slightly from each bracket). Gently pry the screwdriver to release the bracket from the headrail. Take care not to damage the painted finish of the headrail. As you release the brackets, support the headrail to keep it from falling.

